

# LED SNAP & GO™ KIT

## MAGNETIC MODULES

### INSTALL INSTRUCTIONS



#### SAFETY INSTRUCTIONS

**PLEASE FIND A QUALIFIED ELECTRICIAN FOR INSTALLATION.** Please read the instructions before you install and use the luminaire.

#### FOLLOW ALL SAFETY INSTRUCTIONS

**DANGER –RISK OF SHOCK –DISCONNECT POWER BEFORE INSTALLATION**

**WARNING** –Risk of fire or electric shock. LED Retrofit Kit installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Product must be installed in accordance with the National Electrical Code or your local electrical code. If you are not familiar with these codes and requirements, contact a qualified electrician.

**WARNING** –Risk of fire or electric shock. Install this kit only in the luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaire.

Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation. **WARNING** –To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or any other sharp objects.

**WARNING** –Risk of fire or electric shock. Luminaire wiring and electrical parts may be damaged when installing of retrofit kit hardware. Check for enclosed wiring and components.

**WARNING** –Risk of fire or electric shock. Check the existing wiring for damage before installing upgrade kit.

Do not install if existing wires are damaged.

**DO NOT USE WITH DIMMERS. SUITABLE FOR DRY LOCATIONS. SUITABLE FOR USE IN TOTALLY ENCLOSED LUMINAIRES.**

**THIS DEVICE IS NOT INTENDED FOR USE WITH EMERGENCY EXITS.**

#### INSTALLATION



1. Remove the original fluorescent tube.




2. Remove the ballast.



3. Remove other irrelevant parts of the troffer.



4. Connect the output line of driver and power line.

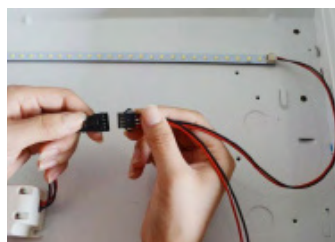

5. Connect input line of driver and kit's line.



6. Fasten the magnetic strip and driver in the troffer.



7. Close the cover of the driver.  
8. Affix included caution labels to fixture so they are visible to bulb installers.



9. Close the cover of the troffer.